


INSTRUCTIONS

HOW TO RESPOND TO IGNIS 2500 CONTROL PANEL SIGNALS

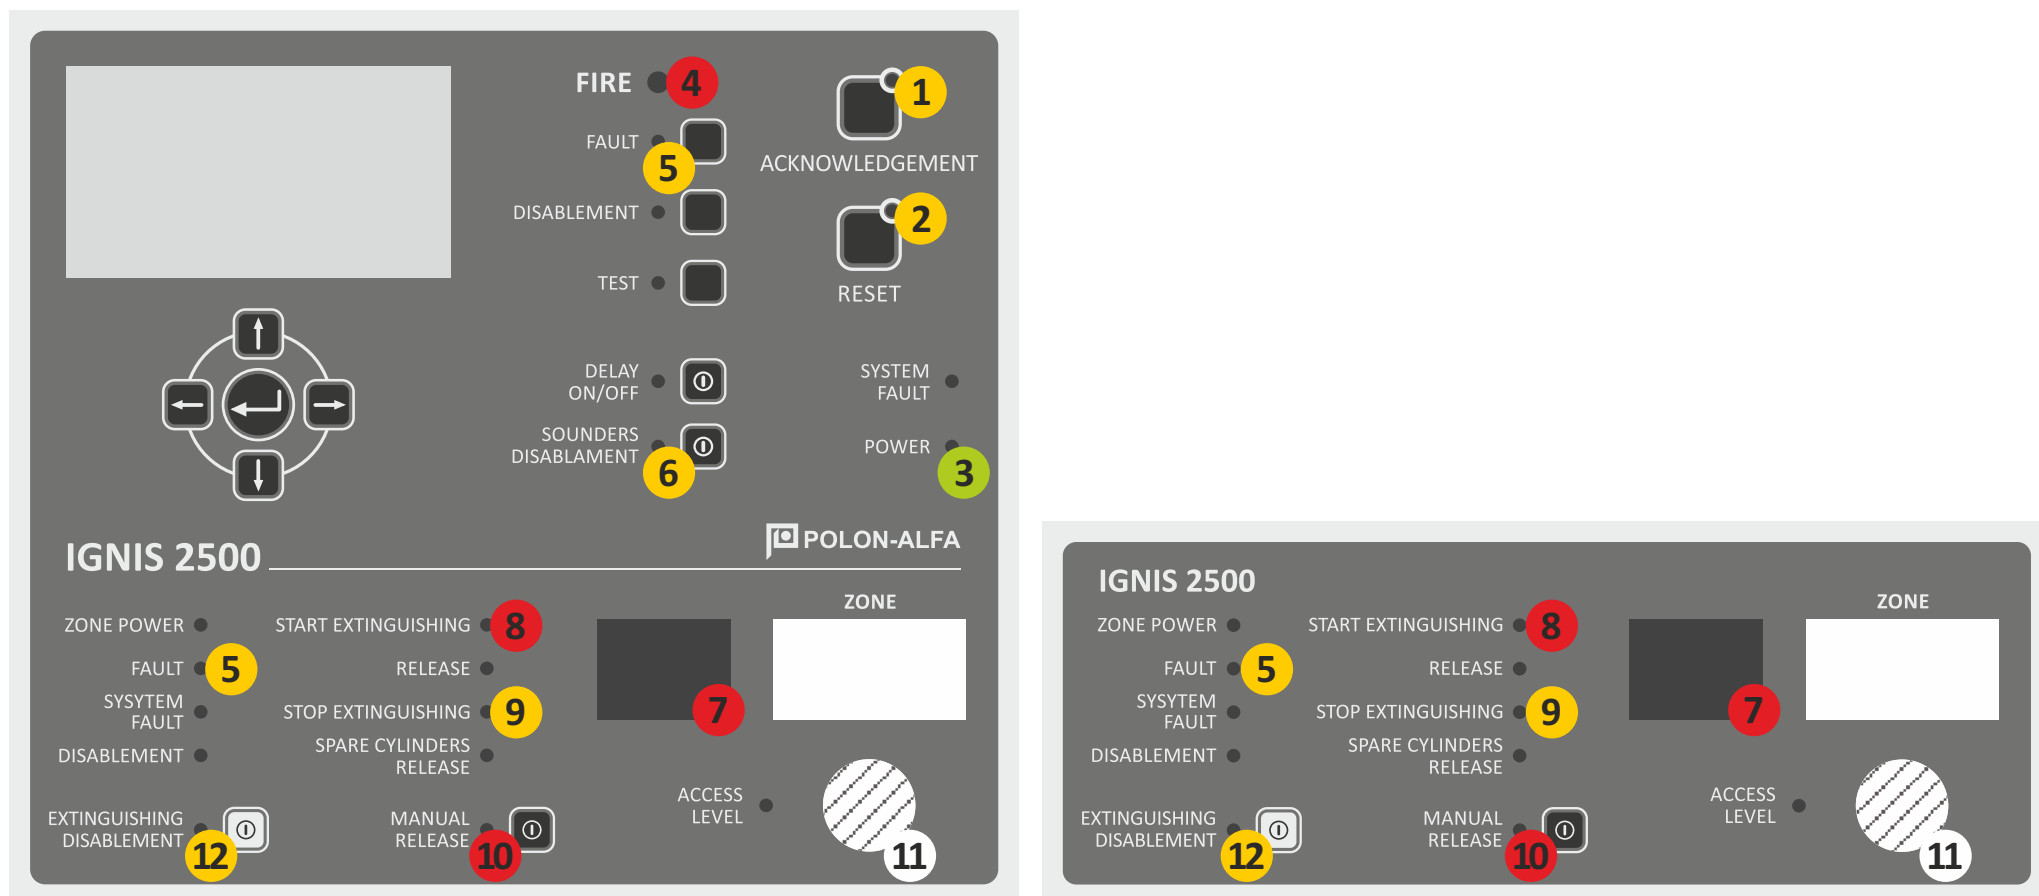

A	POWER Indicator 3 is lit – device is operational and ready to detect fire.
B	Indicator 5 - shows FAULT STATE (general or reported by any panel's component). ACTIONS: <ul style="list-style-type: none"> confirm the status with ACKNOWLEDGE 1 keypad button, buzzer will be silenced; notify the maintenance Staff/Company. If the POWER indicator 3 blinks – there is no mains or battery power.
C	FIRE Indicator 4 blinks and the START EXTINGUISHING 8 indicator blinks – this is FIRE ALARM state. ACTIONS: <ul style="list-style-type: none"> confirm the alarm state with ACKNOWLEDGE 1 ; buzzer will be silenced, FIRE indicator 4 will be solid lit; make a recon for reported alarm location; when ensured the real fire state and the personnel has left the extinguished room – activate the START EXTINGUISHING call point, which is located next to the room entrance; for false alarm – return to panel and reset the alarm according to appendix G steps – panel will go back to standby mode.
D	START EXTINGUISHING 8 is solid lit on one of the zone indication modules – this is PREPARATION FOR AUTOMATIC EXTINGUISHING PROCEDURE , the numeric display 7 counts down the delay timer for extinguishing devices activation ACTIONS (case depending): <ul style="list-style-type: none"> allow the automatic extinguishing procedure to proceed; temporarily hold the extinguishing procedure by pressing and holding the STOP EXTINGUISHING button installed inside the room – the indicator 9 will be lit while on hold; to permanently disable the extinguishing by pressing the DISABLE EXTINGUISHING 12 button on panel's keypad after the switch to Access Level II by rotating the key 11 - MANUAL OPERATION indicator will be lit.
E	Indicator 6 is solid lit – the alarm devices are active and FIRE BRIGADE notification/routing is active. When the fire will be active ACTIONS: <ul style="list-style-type: none"> notify FIRE BRIGADE about the false alarm; reset the alarm according to appendix G steps.
F	Manual Operation <ul style="list-style-type: none"> to disable automatic extinguishing activation made by detectors – it required to turn key 11 to horizontal position and press 10 button – MANUAL OPERATION indicator will be lit. Returning to automatic operation is possible by pressing the MANUAL OPERATION again.
G	RESET ALARM – rotate 11 key to horizontal position and press RESET button 2 .